



Mitel MiVoice 5340e IP Phone

Quick Reference Guide

Quick Reference Guide

MiVoice 5340e IP Phone



- | | | | |
|---|--|--|---------------------|
| 1 | Display | | Speaker |
| 2 | Ring/Message Indicator | | Mute |
| 3 | Volume, Speaker/Mute Controls | | Menu |
| 4 | Fixed Function Keys | | Cancel |
| 5 | Keypad | | Redial |
| 6 | Page Navigation Keys | | Hold |
| 7 | Programmable Feature Keys and Softkeys | | Transfer/Conference |
| 8 | Speaker | | Message |
| 9 | Handset | | |

Note: For more information about other features and applications, refer to *5330e/5340e IP Phone User Guide* located at www.mitel.com, or contact your Administrator.

Make a Call

- 9 Lift the handset OR
- 3 Press
- 5 Dial the number OR
- 7 Press a **Speed Call** key OR
- 4 Press
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- 9 Lift the handset OR
- 3 Press , and begin speaking.

End a Call

- 4 Press OR
- 9 Replace the handset.

Place a Call on Hold

- 4 Press . The line key flashes.
- 9 Replace the handset if necessary.

Retrieve a Call from Hold

- 9 Lift the handset OR
- 3 Press
- 7 Press the flashing line key.

Retrieve a Message

- 4 Press . It flashes when a message is waiting. Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press
- 5 Dial the number. Wait for an answer.
- 9 Hang up OR wait for the called party to answer, announce the transfer, and then hang up.

Conference a Call

- 4 Press
- 5 Dial the number of the next party. Wait for an answer.
- 4 Press

Program a Speed Call

- 4 Press **Menu** OR .
Press **Settings**.
Press **Programmable Keys**.
Press the key you wish to program.
Press **Speed Call**.
Press **Edit Info** and enter the label for the Speed Call.
Press **Save**.
Press **Edit Number** and enter the phone number for the Speed Call.
Press **Save**, and then press **Save** again.
Press **Close** and then press **Close** again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR repeatedly to lower the volume.
- 3 Press to mute your microphone.

© Copyright 2017, Mitel Networks Corporation. All Rights Reserved.

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at legal@mitel.com for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

Mitel's Power Over Ethernet (PoE) Powered Device (PD) products are covered by one or more of the U.S. patents (and any foreign patent counterparts thereto) identified at Mitel's website: www.mitel.com/patents. For more information on the PD patents that are licensed, please refer to www.cmspatents.com.